

 
 
Features

1. Small size, easy to carry.
2. Compatible with the line control feature of iPhone.
3. Use earphone to record the call; need no software, voice recorder or jailbreak.
4. Able to listen to songs, answer calls, record.
5. Can be used as a voice recorder.
6. Easy to use, just press button to record.
7. Voice prompt when start to record or recording ends.
8. Can play the recording, save the recording into the phone.
9. Can copy the recording files out from earphone connected to computer via USB cable.
10. Good sound quality, stereo clear bass.
11. Built in 512Mb memory, recording duration up to 16 hours.
12. Built in 200mAh lithium battery, continuous recording up to 5 hours.

Parameters

1. Working voltage: 5V
2. Shell material: ABS
3. Recording current: $\leq 40\text{mA}$
4. Playing current: $\leq 50\text{mA}$
5. Sleep current: $\leq 10\mu\text{A}$
6. Charging current: $\leq 200\text{mA}$
7. Cable length: $1.2\text{M} \pm 5\%$
8. USB port: 3.5mm
9. Earphone shell: ABS plastic/ aluminum alloy
10. MIC sensitivity: -42dB omni response
11. Environment: indoor use, relative humidity less than 95%

Appearance introduction

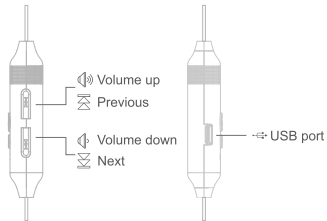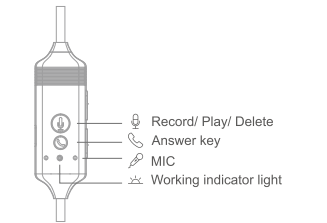

Key function description

	Short Press	Long Press
	Play the recording recorded last time. If switch the previous or next, it will automatically memory the recording played last time. Short press to stop playing.	1. Release it after red light flashes. After the "di" sound, it starts recording. Short press again, "di di" sounds twice, then recording ends. 2. Long press this key 8s. Red light rapidly flashes 3 times, then current recording you listen will be deleted. 3. Press it and "Next" key simultaneously. Hold them over 8s. When the red light rapidly flashes 3 times, all recordings will be deleted.
	Its function is the same with the answer key of the line control earphone	Its function is the same with the answer key of the line control earphone
	1. When not playing, it is line control function and volume up. 2. When playing the recording, press it to play the previous one.	Hold this key to increase the volume, 8 levels of volume for adjustment.
	1. When not playing, it is line control function and volume down; 2. When playing the recording, press it to play the next one.	1. Long press to reduce the volume, 8 levels of volume for adjustment. 2. Press this key and record key simultaneously, press them over 8s. When red light rapidly flashes 3 times, all recordings will be deleted.

Working indicator light

Red Light:	1. During the recording, red light flashes; 2. When playing, red light on all the time; 3. When delete the recording, the red light flashes 3 times; 4. Without any operation, the red light flashing quickly, means memory full and files automatically deleted; 5. When the battery is insufficient, each time finish playing, the red light will flash 5 times.
Blue Light:	Light on all the time when charging. Light off when full charged.

USB charging and copying

Charging: Micro USB interface for charging, provide USB cable for customers.

Copying: Use USB cable to connect computer, it will automatically recognize the removable drive. At this time, you can delete or copy the files of this removable drive.

Loop recording

When the memory is less than 50Mb, it will automatically delete the oldest files. If the recording is very important, after the recording ends, please copy it out to save or save into the mobile phone. How to save in the phone? Open mobile phone recorder. You can also download the mobile phone recording software (VoiceRecorder), playing the recording, recording back to the mobile phone.

Sleep mode

When there is no any operation, 3s later, it will automatically enter the sleep mode. When press the record key, it will start to work immediately. In the sleep status, when you enable the recording, it will have 3 seconds delay, that's normal.

Using notes

- When using, pay attention to control the volume, so as not to damage the hearing.
- Do not force pull the earphone cable, or it may be damaged.
- In the environment of high temperature and high humidity, use earphone for a long time, easy to cause damage to the earphone or reduce its service life.
- When driving a car, riding a bicycle or walking on the road, don't wear earphone, otherwise easily cause traffic accidents.
- Please keep the earphone out the reach of children, in case of danger.
- Please timely charge, so as not to affect the normal use.
- Charging time should be not too long. When full charged, unplug the charger timely.
- Avoid the battery run out. At least charge once every 3 months, otherwise may cause permanent damage to the battery.

Operation instruction

- When finish recording, system will automatically query the current remaining capacity. Pressing key immediately may not play, no reaction. Please operate 1s later when the recording ends.
- It will automatically enter the sleep mode when there is no any operation. When it wakes up from the sleep status, will delay 3~4 seconds to perform the action. So when start to record or play, please be patient and don't repeat pressing the key.
- This product only supports the line control function of iphone 4 and above version. Since the keys are multi-purpose, when inserted into the phone, please don't let this product in the state of play, otherwise it will cause line control function invalid. At this time, please remove the earphone, and insert again, then this function can be normal.
- After finishing recording the call, please unplug the earphone when you listen to the recording. Don't connect to the phone. Apple mobile phone audio output signal will overlap the recording playback signal of the earphone, which will cause the sound quality worse and volume decreasing.
- Unless necessary, please do not delete the recording in the memory card. The recordings are saved by file name order, playing according to the internal address order. When you play the recording and have the delete operation, not only the file name will be deleted, but also the address will be empty. Next time the file name of recording will be automatically fill in the address of the deleted files. When play this recording file, press the "Previous" or "Next" key, what it will switch is the audio files where the files are deleted.

Warranty Card

Product model: _____	Customer name: _____
Production number: _____	Customer address: _____
Purchase date: _____	Customer phone: _____
Buyer company: _____	E-Mail: _____
Company phone: _____	Post code: _____

Please fill the blank carefully.

Lithium battery warranty is 3 months. If out of warranty period, need to charge fees to replace the battery; other components warranty is 1 year, excepted the artificial damage.